




















































Color Code/ Color Samples


Automotive Upholstery

						
A-004	A-005	A-101	A-102	A-104	A-105	A-108
						
A-109	A-201	A-209	AW-001	AW-002	AW-018	AW-026
						
AW-211	AW-212	AW-217	AW-269	AW-301	AW-302	AW-306
						
AW-307	AW-371	AW-401	AW-402	AW-403	AW-404	AW-405
						
AW-406	AW-407	AW-408	AW-409	AW-410	AW-500	AW-501
						
AW-502	AW-503	AW-504	AW-505	AW-506	AW-507	AW-508
						
AW-509	AW-510	AW-600	AW-601	AW-602	AW-603	AW-635
						
AW-718						


Furniture Upholstery




FT-204




FT-206




FT-209



FT-217



FT-221



FT-224



FT-227



FT-257



FT-291




FT-292




FT-293




FT-294




FT-298




FT-299



FT-304




F-309



FT-311



FT-313



FT-316



FT-320




FT-326




FT-332



FT-387




FT-413



FT-414



FT-423



FT-424




FT-425




FT-427



FT-431




FT-433




FT-445




FT-446




FT-614




FT-615




FT-616




FT-617




FT-618




FT-745




FT-750




FT-901




FT-906



FT-908



FT-909




FN-101




FN-102




FN-103




FN-104




FN-105



FN-106




FN-107




FN-108




FN-109




FN-110




FN-111




FC-001




FC-002




FC-003



FC-004




FC-005




FC-006




FC-007




FC-008




FC-009



FC-010




FC-011




FC-012



FC-013



FC-014



FC-015




FC-016




FC-017




FG-201

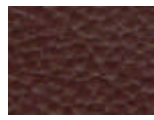

FG-202

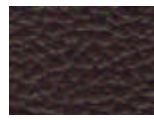


FG-203

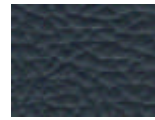

FG-204




FG-205

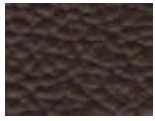


FG-206




FG-207

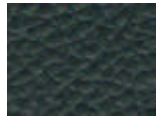


FG-208

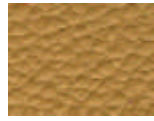

FG-209

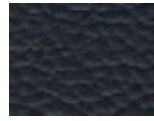


FG-210

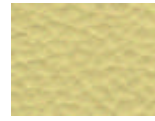


FG-211




FG-212

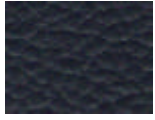


FG-213

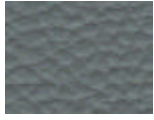


FG-214

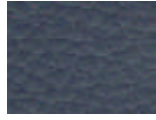

FG-215

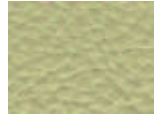


FG-216

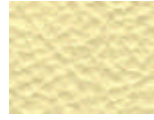


FG-217




FG-218

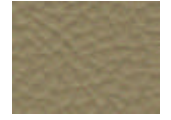

FG-219

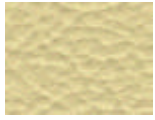


FY-301

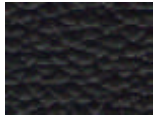


FY-302




FY-303

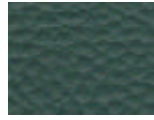


FY-304

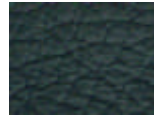

FY-305

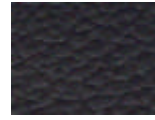

FY-306

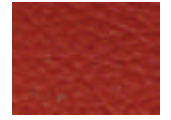

FY-307



FY-308



FY-309